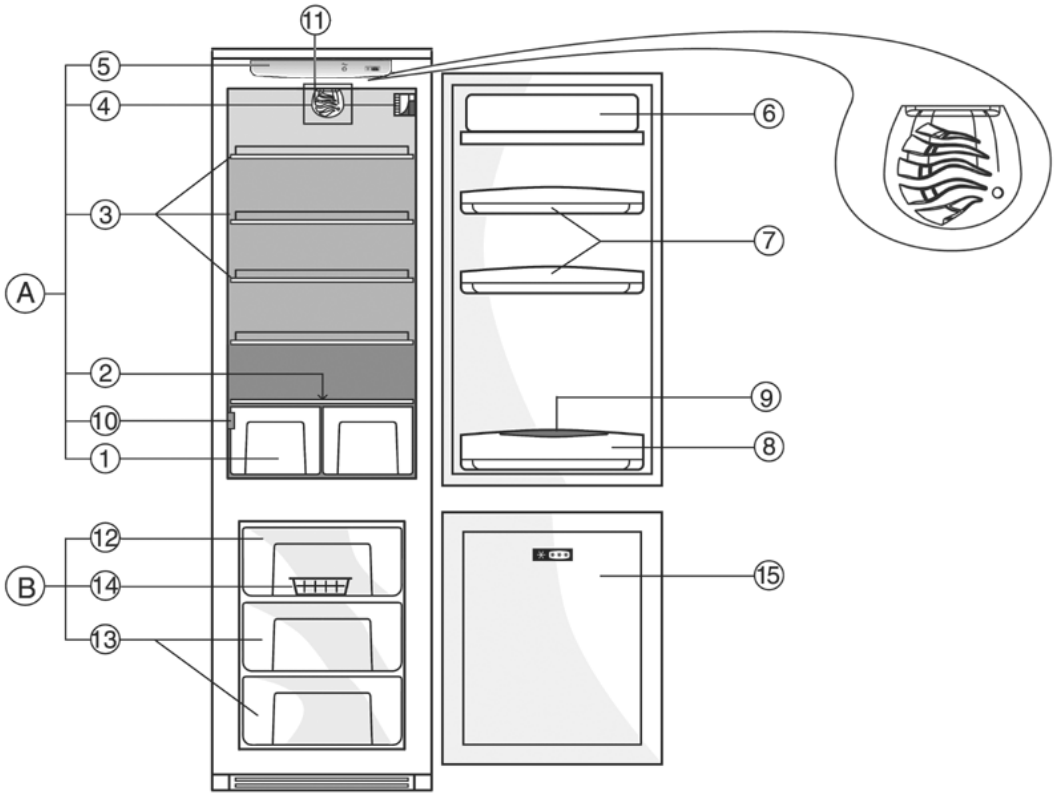


## wA. Refrigerator Compartment

1. Crispers
2. Crisper shelf
3. Shelves / Shelf area
4. Thermostat control knob/light
5. Indicator panel (if provided)
6. Upper door tray
7. Door trays
8. Bottle rack
9. Removable bottle restraint
10. Rating plate (at the side of crisper drawer)
11. Fan (if provided)

## B. Freezer Compartment

12. Upper basket (area for freezing)
13. Compartment for storing frozen/deep frozen foods
14. Ice cube tray (inside the basket)
15. Freezer compartment inner door

Least cold zone

Intermediate temperature zone

Coldest zone

**Notes**: The number of shelves and type of accessories may vary, depending on the model.
All shelves, door trays and racks are removable.

**Attention: Refrigerator accessories must not be washed in a dishwasher.**

The Fridge/Freezer is switched on by means of the thermostat located inside the refrigerator compartment.
The thermostat also serves to adjust the temperature in both the refrigerator and freezer compartments.

## Refrigerator compartment controls

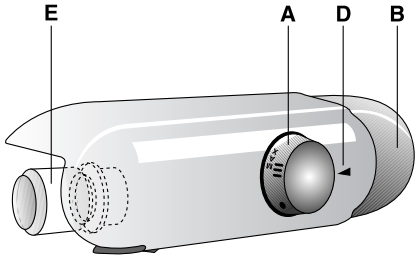


**A.** Thermostat knob
**B.** Light switch
**D.** Thermostat control reference
**E.** Light bulb (max. 15 W)

Thermostat set to **1/MIN** : **minimum refrigeration**
Thermostat set to **3-5/MED** : **medium refrigeration**
Thermostat set to **7/MAX** : **maximum refrigeration**
Thermostat set to ● : **no refrigeration, no light**

**Recommended thermostat setting: 3-5/MED position.**

**Note**: The ambient air temperature, the frequency of door opening and the position of the appliance can affect the internal temperatures of the refrigerator. These factors must be taken into account when setting the thermostat.

## Indicator panel (if provided)

## Removing the light bulb

Unscrew the bulb anticlockwise as shown in the figure.

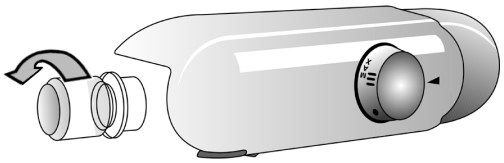

## Fan (if provided)

The fan operates automatically.
The fan gives more even temperature distribution inside the refrigerator compartment thus allowing better conservation of stored food and reduction of excess moisture.
**Do not obstruct the fan intake area (11) with food.**